



COTTON CANDY MACHINE OPERATION

(Children are not allowed to operate machine)

1. Place Cotton Candy Machine on sturdy, clean surface.
2. Lower Screws on base so bowl sits flat.
2. Place Cotton Candy Bowl over the head of the machine.
3. Plug in floss machine. Turn main power and motor switch "on".
4. Fill the Cotton Candy head about $\frac{3}{4}$ full with 'Flossugar'.
ALWAYS add sugar with the motor running;
Keep the bowl 90% full whenever you add sugar.
5. Turn heat dial up to high until the floss comes out, then turn the heat down a bit to prevent the machine from smoking.

Helpful Tips for Making Cotton Candy

1. Moisten the inside of the floss pan with a damp cloth so floss will adhere to the pan.
2. Note the direction of the floss as it is spun off the floss head.
3. Adjust leather floaters (on top of the spinner head): up for more lift, down for less lift. Practice will give good control.
4. Hold the cone an inch or two at the pointed end between two fingers and thumb.
5. Break into the web of floss with a light flicking motion.
6. Lift up the cone with the ring of floss attached and wind the floss onto the cone.
7. Brush cone with damp sponge so floss does adheres to cone.
8. Roll floss on outside of pan ONLY.
9. Turn the ring of floss onto the cone in a figure "8" pattern to make a larger web.

Cleaning Instructions

NOTE: Unit must be cleaned whether you cease operation for a few hours or for the day.

1. Run all the sugar out of the floss head.
2. Turn heat to the highest setting for one minute when empty to burn off excess sugar.
3. Unplug main electrical supply cord **FIRST**.
4. Wipe floss head with damp cloth. (**NEVER allow water to enter the floss head.**)

**Please -Be sure all parts are dry before resuming operation or returning the machine.
Unit must be returned to Knights Tent & Party Rental in the condition it was received:**

Cleaned and ready for use. Thank you! Enjoy!